

M3T-FLX-120NSE

Converter Board for Connecting 160-core Flexible Board FLX160 to 120-pin 0.4-mm-pitch LQFP

User's Manual

Keep safety first in your circuit designs!


- Renesas Technology Corporation and Renesas Solutions Corporation put the maximum effort into making semiconductor products better and more reliable, but there is always the possibility that trouble may occur with them. Trouble with semiconductors may lead to personal injury, fire or property damage. Remember to give due consideration to safety when making your circuit designs, with appropriate measures such as (i) placement of substitutive, auxiliary circuits, (ii) use of nonflammable material or (iii) prevention against any malfunction or mishap.

Notes regarding these materials

- These materials are intended as a reference to assist our customers in the selection of the Renesas Technology product best suited to the customer's application; they do not convey any license under any intellectual property rights, or any other rights, belonging to Renesas Technology Corporation, Renesas Solutions Corporation or a third party.
- Renesas Technology Corporation and Renesas Solutions Corporation assume no responsibility for any damage, or infringement of any third-party's rights, originating in the use of any product data, diagrams, charts, programs, algorithms, or circuit application examples contained in these materials.
- All information contained in these materials, including product data, diagrams, charts, programs and algorithms represents information on products at the time of publication of these materials, and are subject to change by Renesas Technology Corporation and Renesas Solutions Corporation without notice due to product improvements or other reasons. It is therefore recommended that customers contact Renesas Technology Corporation, Renesas Solutions Corporation or an authorized Renesas Technology product distributor for the latest product information before purchasing a product listed herein. The information described here may contain technical inaccuracies or typographical errors. Renesas Technology Corporation and Renesas Solutions Corporation assume no responsibility for any damage, liability, or other loss rising from these inaccuracies or errors. Please also pay attention to information published by Renesas Technology Corporation and Renesas Solutions Corporation by various means, including the Renesas home page (<http://www.renesas.com>).
- When using any or all of the information contained in these materials, including product data, diagrams, charts, programs, and algorithms, please be sure to evaluate all information as a total system before making a final decision on the applicability of the information and products. Renesas Technology Corporation and Renesas Solutions Corporation assume no responsibility for any damage, liability or other loss resulting from the information contained herein.
- Renesas Technology semiconductors are not designed or manufactured for use in a device or system that is used under circumstances in which human life is potentially at stake. Please contact Renesas Technology Corporation, Renesas Solutions Corporation or an authorized Renesas Technology product distributor when considering the use of a product contained herein for any specific purposes, such as apparatus or systems for transportation, vehicular, medical, aerospace, nuclear, or undersea repeater use.
- The prior written approval of Renesas Technology Corporation and Renesas Solutions Corporation is necessary to reprint or reproduce in whole or in part these materials.
- If these products or technologies are subject to the Japanese export control restrictions, they must be exported under a license from the Japanese government and cannot be imported into a country other than the approved destination. Any diversion or reexport contrary to the export control laws and regulations of Japan and/or the country of destination is prohibited.
- Please contact Renesas Technology Corporation or Renesas Solutions Corporation for further details on these materials or the products contained therein.

Precautions to be taken when using this product

- This product is a development supporting unit for use in your program development and evaluation stages. In mass-producing your program you have finished developing, be sure to make a judgment on your own risk that it can be put to practical use by performing integration test, evaluation, or some experiment else.
- In no event shall Renesas Solutions Corporation be liable for any consequence arising from the use of this product.
- Renesas Solutions Corporation strives to renovate or provide a workaround for product malfunction at some charge or without charge. However, this does not necessarily mean that Renesas Solutions Corporation guarantees the renovation or the provision under any circumstances.
- This product has been developed by assuming its use for program development and evaluation in laboratories. Therefore, it does not fall under the application of Electrical Appliance and Material Safety Law and protection against electromagnetic interference when used in Japan.



Renesas Tools Homepage <http://www.renesas.com/en/tools>

1. Outline

The M3T-FLX-120NSE is a converter board for connecting the 160-core flexible cable FLX160 to a foot pattern for 120-pin 0.4-mm-pitch LQFP (120P6R-A).

2. Package Components (See Figure 1)

- (1) M3T-FLX-120NSE converter board
- (2) YQPACK120SE (made by Tokyo Eletech Corporation)
- (3) NQPACK120SE (made by Tokyo Eletech Corporation)
- (4) YQ-GUIDE (4 pieces) (made by Tokyo Eletech Corporation)
- (5) M3T-FLX-120NSE User's Manual (This manual)

3. Specifications

Table 1 Specifications

Applicable package	120P6R-A (120-pin 0.4-mm-pitch LQFP)
Insertion/removal iterations of connector	50 times guaranteed

4. Usage (See Figure 2)

The M3T-FLX-120NSE can be used for debugging and board mounted evaluation in common by mounting the NQPACK120SE on the target board.

- (1) For debugging
Mount the NQPACK120SE and YQPACK120SE on the foot pattern of the target board in that order. And connect the probe of the emulation pod to the upper connector of the M3T-FLX-120NSE. Then connect the YQPACK120SE and the M3T-FLX-120NSE.
- (2) For onboard evaluation
Mount an MCU with on-chip flash memory or one-time PROM and the HQPACK120SE (separately available) in that order on the NQPACK120SE on the target system.

Before using the M3T-FLX-120NSE, be sure to read "7. Precautions" on page 4.

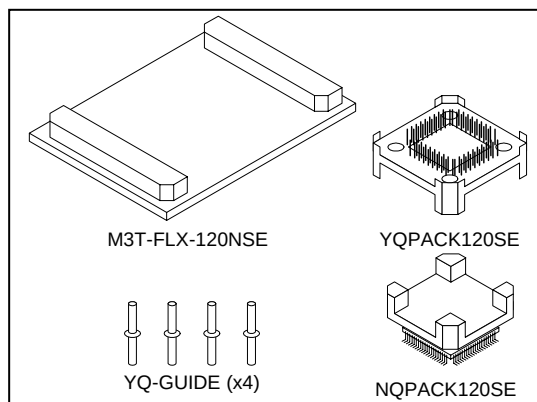


Figure 1 Package components of the M3T-FLX-120NSE

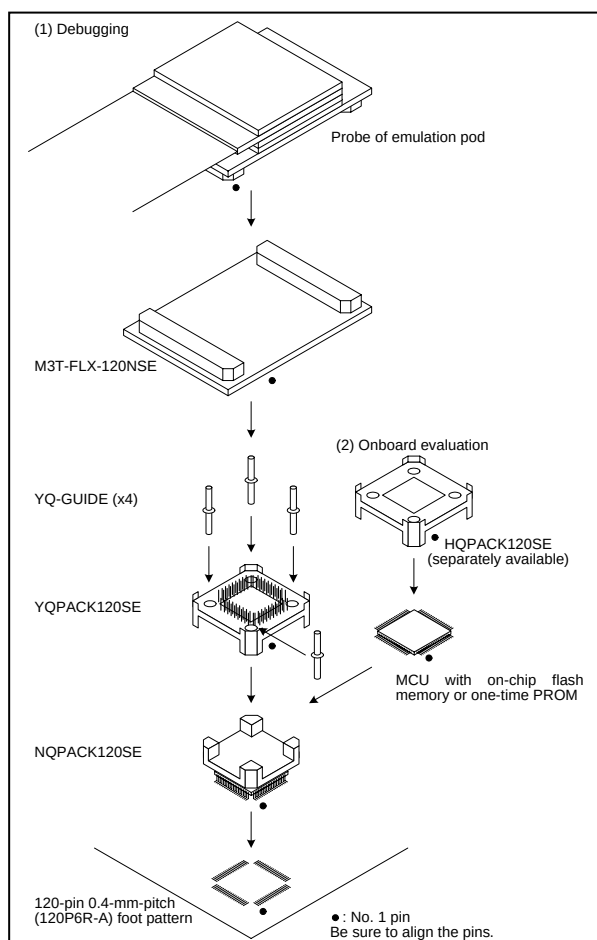


Figure 2 Usage of the M3T-FLX-120NSE

5. Connection Procedure (See Figure 3)

The procedure for connecting the M3T-FLX-120NSE is shown below.

- (1) Mount the NQPACK120SE on the target system.
- (2) Attach the YQPACK120SE on the NQPACK120SE.
- (3) Secure the four corners of the YQPACK120SE with the YQ-GUIDE's.

- Do not use the screws included with the YQPACK120SE for fixing the YQPACK120SE.
- The screwdriver included with the NQPACK120SE is used for fixing the HQPACK120SE. Do not use it for fixing the YQ-GUIDE's.

- (4) Connect the probe of the emulation pod to the M3T-FLX-120NSE.
- (5) Attach the M3T-FLX-120NSE on the YQPACK120SE.

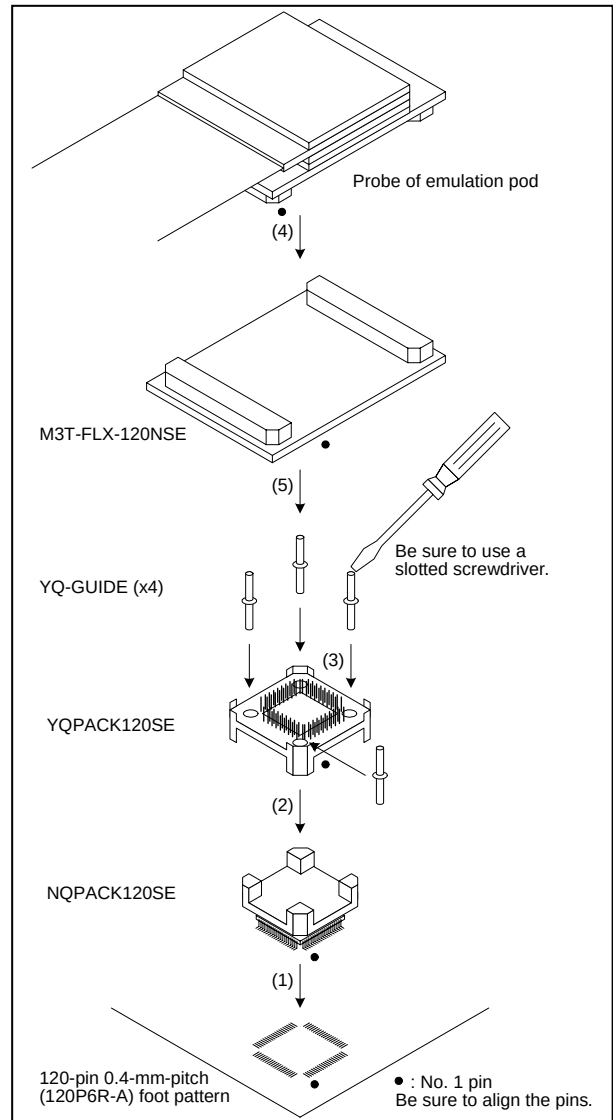


Figure 3 Connection procedure of the M3T-FLX-120NSE

6. External Dimensions and a Sample Foot Pattern

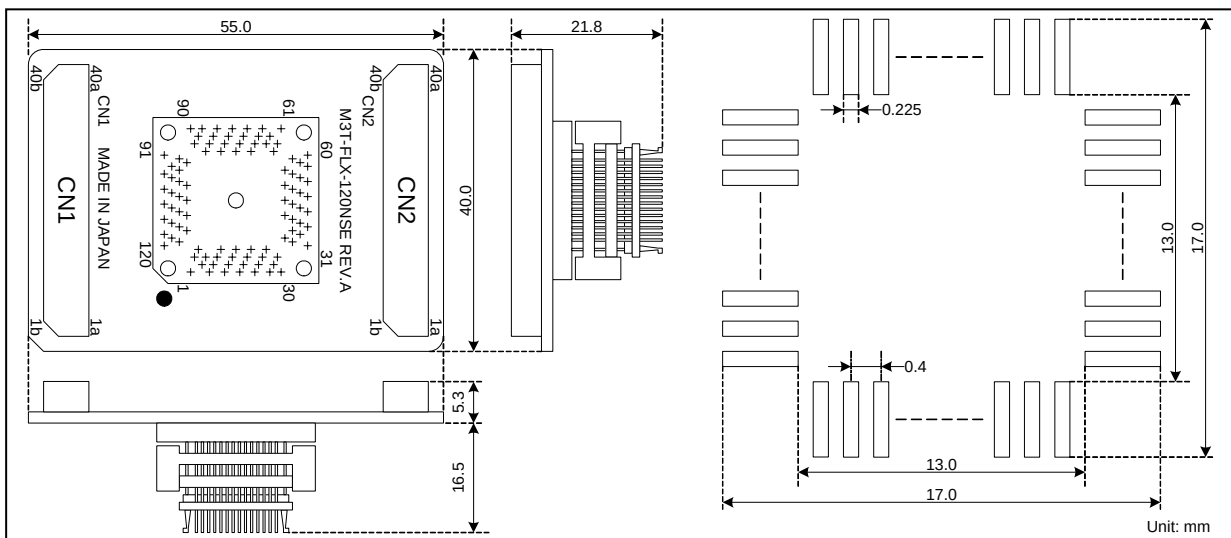


Figure 4 External dimensions and a sample foot pattern of the M3T-FLX-120NSE

7. Precautions

⚠ CAUTION

Caution to Be Taken for This Product:



- To connect the YQPACK120SE, be sure to use the included YQ-GUIDE's.
- Do not use the screws included with the YQPACK120SE to fix it.

IMPORTANT

Notes on This Product:

- We cannot accept any request for repair.
- For purchasing the NQPACK120SE, YQPACK120SE and HQPACK120SE, contact the following:
 Daimaru Kogyo Ltd. <http://www.daimarukogyo.co.jp/>
 Tokyo Eletech Corporation http://www.tetc.co.jp/e_tet.htm
- For inquiries about the product or the contents of this manual, contact your local distributor.
 Renesas Tools Homepage <http://www.renesas.com/en/tools>

8. Correspondence of Connectors CN1 and CN2

Table 2 Correspondence of the Connectors

CN1	IC1	CN1	IC1	CN2	IC1	CN2	IC1
1a	NC	1b	15	1a	NC	1b	16
2a	14	2b	13	2a	17	2b	18
3a	12	3b	11	3a	19	3b	20
4a	10	4b	NC	4a	21	4b	22
5a	9	5b	NC	5a	23	5b	24
6a	8	6b	NC	6a	25	6b	26
7a	7	7b	6	7a	27	7b	28
8a	5	8b	4	8a	NC	8b	NC
9a	3	9b	2	9a	NC	9b	NC
10a	1	10b	NC	10a	29	10b	NC
11a	NC	11b	NC	11a	NC	11b	30
12a	120	12b	119	12a	31	12b	32
13a	118	13b	117	13a	33	13b	34
14a	116	14b	NC	14a	NC	14b	NC
15a	NC	15b	115	15a	35	15b	36
16a	114	16b	113	16a	37	16b	38
17a	112	17b	111	17a	39	17b	40
18a	110	18b	109	18a	NC	18b	NC
19a	108	19b	107	19a	NC	19b	41
20a	NC	20b	NC	20a	42	20b	NC
21a	NC	21b	NC	21a	NC	21b	NC
22a	106	22b	105	22a	43	22b	44
23a	104	23b	103	23a	45	23b	46
24a	102	24b	101	24a	47	24b	48
25a	100	25b	99	25a	49	25b	50
26a	98	26b	97	26a	51	26b	52
27a	96	27b	95	27a	53	27b	54
28a	94	28b	93	28a	55	28b	56
29a	92	29b	91	29a	57	29b	58
30a	90	30b	NC	30a	59	30b	NC
31a	NC	31b	89	31a	NC	31b	60
32a	NC	32b	NC	32a	61	32b	62
33a	NC	33b	NC	33a	63	33b	64
34a	88	34b	87	34a	65	34b	66
35a	86	35b	85	35a	67	35b	68
36a	84	36b	83	36a	69	36b	70
37a	82	37b	81	37a	71	37b	72
38a	80	38b	79	38a	NC	38b	NC
39a	78	39b	77	39a	73	39b	74
40a	76	40b	NC	40a	75	40b	NC

(NC: No connection)